

HZ3818B

# CHARA WARM

Electric Spa Bed with Heating



DDUUEETT EUROPE would like to thank you for choosing Sonia products. We hope that this instruction manual will help you get the most out of this product.

If you have any doubts regarding its use and/or operation, please contact your distributor.

## FOREWORD

- Please read the entire instruction manual carefully before using the product. Take note of any warnings included in this manual.
- Always keep this instruction manual handy and if you give the device to another person, hand over the manual as it is an essential part of the product.
- Some components of the product may differ from the image that appears in catalogues, websites, brochures, etc.
- In order to enhance the product, the manufacturer reserves the right to modify its features and/or components without prior notice.


## CORRECT USE OF THE DEVICE

- This product has been designed to be used by beauty professionals at beauty salons and should not be used for other purposes.
- Please note that any misuse of the device entails the loss of the guarantee.
- Do not make any modification to the device without the authorisation of DDUUEETT EUROPE SL.
- DDUUEETT EUROPE SL shall not be held liable for any material or personal damage due to the misuse of the product.

## PRECAUTIONS AND SAFETY INDICATIONS

- Before connection, operation and adjust the bed, please read and the user manual carefully.
- Women being pregnant or in menstruation should not use this beauty chair.
- Someone injured or with disabilities should not use this beauty chair.
- Children under 14 years old without any supervision and someone unconscious should not use this beauty chair.
- All the plugs, buttons and other components connected to the power cable must not dip in the water or other liquid.
- It is forbidden to put your hands, feet, head or other part of the body into the gap as below position①②③④While adjust the height of the bed by remote control and foot control.
- It is prohibited to use when plugs, buttons and other components connected to the power cable are broken.
- It should be noticed that the frequency is 6min/h when the motor of this massage chair is used.
- It should be unplug when it's not used.
- Do not dismount this product without any authorization. Please inform the official service providers to deal with the Maintenance

- The maintenance should not be dealt with without official training.

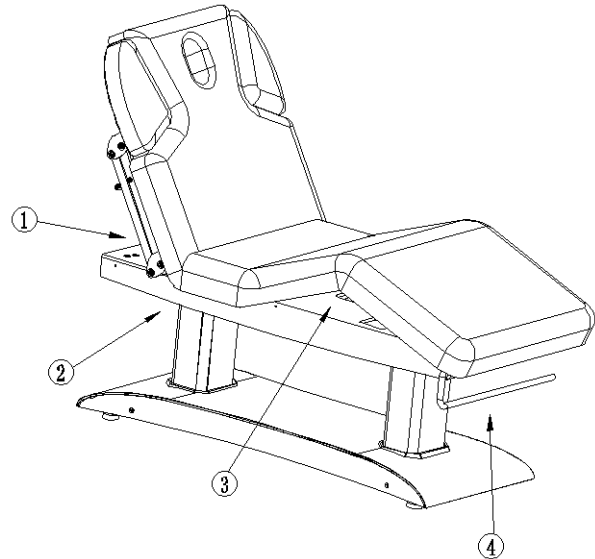

## TECHNICAL SPECIFICATIONS

Size:2000x760x660mm

Min:660mm

Max:840mm

Net weight:103kg

Gross weight:128kg

Capacity:200kg

Input voltage:AC100~130V/220~240V,  
50/60Hz


Output voltage:DC 24V

Power rate:160W

## INSTRUCTIONS

### HAND CONTROLLER

#### ● CONTROLLER

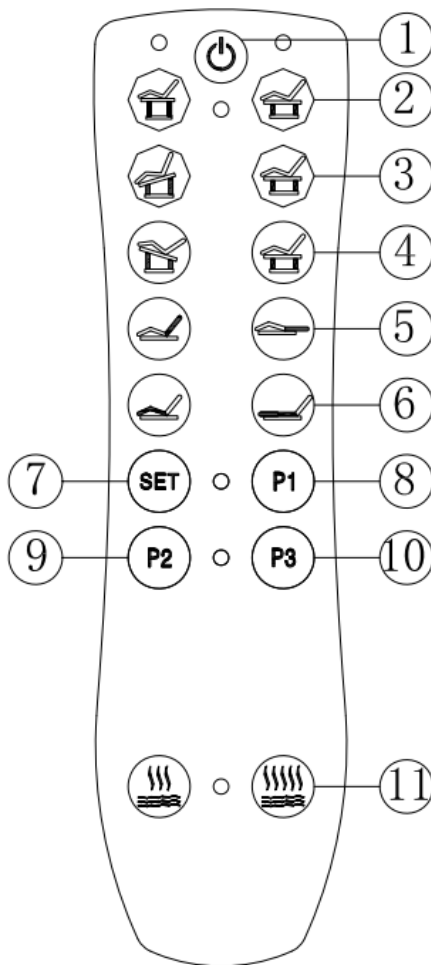

#### ● Hand controller:

① SW1 button: turn on/off hand control, press button, turn on hand control, press again button, turn off hand control, bed back to original position, press again button, bed stop recover.

② SW2 press button, bed rise up, press button, bed descend.

③ SW3 press , to adjust the bed tilt forward,

press , to adjust the bed flat.

④ SW4 press , to adjust the bed tilt backward;

press , to adjust the bed flat.

⑤ SW5 press , to adjust backrest up

press , to adjust backrest down.

⑥ SW6 press , Increased footrest angle,

press , reduced footrest angle.

⑦ SW7 press , setting Memory function.

⑧-⑩ Auto mode button, the bed will automatically adjust to the pre-set height and angle when any key is pressed.

Remark: Automatic mode setting to adjust the status of the lift, tilt, seat length, backrest and footrest sections, long press until the blue light next to it is on to activate the memory cartridge function, press set memory state. are the same method as .

### ●Height adjustment:


Turn on hand control, press




bed rise up, press




button, bed descend, as pic shows

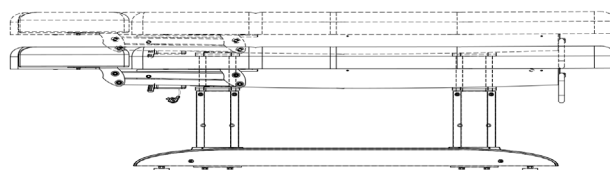

### ●Bed angle adjustment:


press , to adjust the bed tilt

forward, press , to adjust

the bed flat; press , to

adjust the bed tilt

backward; press , to adjust

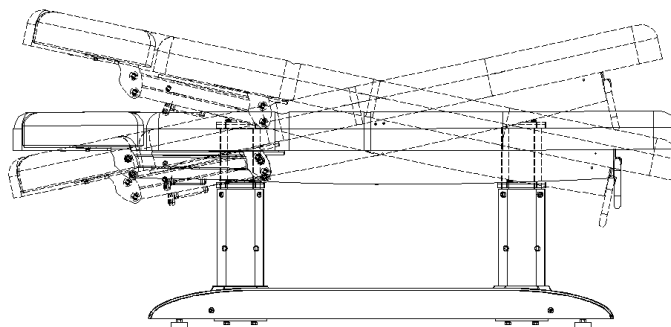


### ●Backrest adjustment



press , button, backrest  
incline angle rise up, press

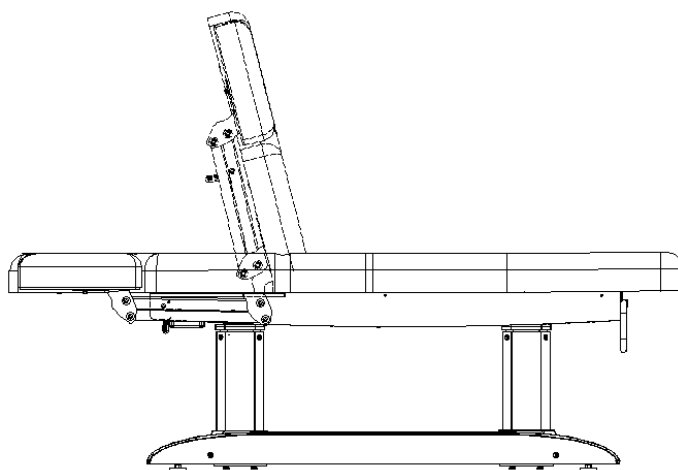


button, reduce backrest  
incline angle, as pic shows :



## ●Footrest adjustment:


press  button, footrest incline angle rise up,press  button, reduce footrest incline angle.

As pic shows:

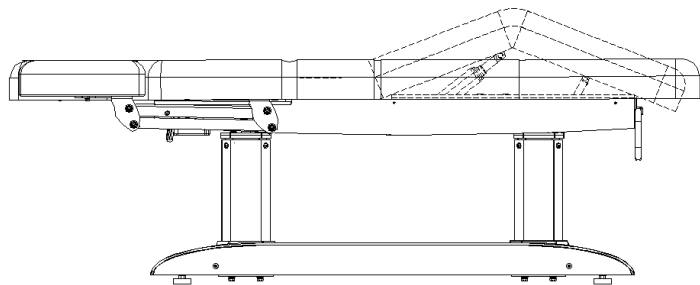


## ●Armrest adjustment:

Press down the gas lift in the arrow direction and not release the hand,meanwhile slightly press down the armrest can adjust its angle,otherwise it will recover,as picture::

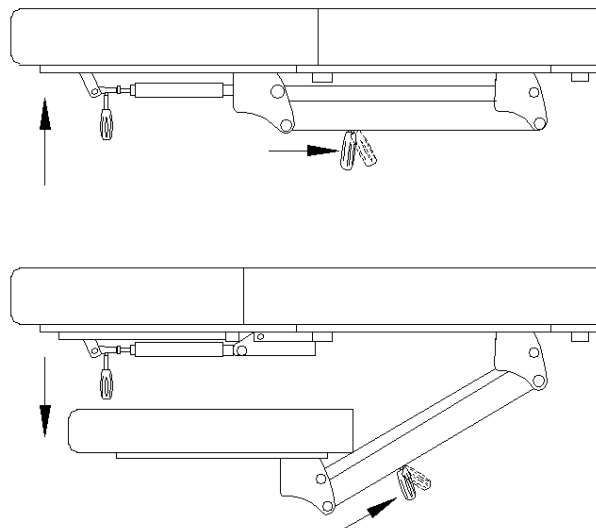

## ● Rubber foot adjustment:

Rotate and adjust height of rubber foot can solve some uneven ground condition,after adjust the height,tighten and fix it upward with the nut,as picture show:

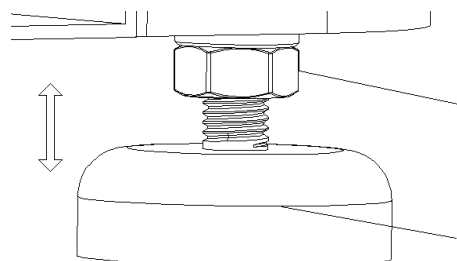

## MAINTENANCE

- Daily cleaning. You can wipe out the dust by using soft dry towel.
- Eliminating the stubborn dirt. As we all know, it is hard to eliminate the stubborn dirt by using normal dry towel. In this case, you can use soft towel with diluted neutral detergent to clean it first. And then you can use dry towel to scrub.
- It's prohibited to use benzene, diluent, gasoline or other solvent. These solvents may damage the leather or it may cause the corrosion of the products' appearance.
- Storage and operating environment. Don't put the product under the strong sunlight and moisture environment. Otherwise it may cause the damages of the product.
- It is allowed to use this product under the temperature from -5°C to 50°C and the humidity from 45% to 85%.

## FAULT DIAGNOSIS

- If there is something wrong when you use the product, please try to check and eliminate the wrong operation as followings.:

Phenomenon	Diagnosis	Operation of elimination
Press the pedal but without any responses.	1.Controller power switch start or not.	1.Try to re-start the controller power switch.
	2.To check if the pedal has reached to maximum.	2.Try other buttons workable or not.
	3. To check if the power plug is connected.	3.Disconnect the power plug and re-plug it again.
	4.To check if each connecting plug of the transformer is connected.	4.Re-plug and connect it again.
Letting out noises and shaking while going up and down	Screw loosen	Tighten all the screws

## RECYCLING

If you need to dispose of the product or any of its parts or accessories, please check and respect the laws and regulations applicable to waste management and environmental protection.



